


DEVSPORT

www.DEVSPORTPARTS.COM

RSX SPLITTER CHASSIS BRACKETS INSTALLATION

Install shall be made entirely at your own risk. DevSport is **not** responsible for any and all damages caused by the improper installation of any product. Professional installation is **recommended**.

NOTE: Brackets shown in Steps 1-3 are our old V1 brackets. Installation process is the same.

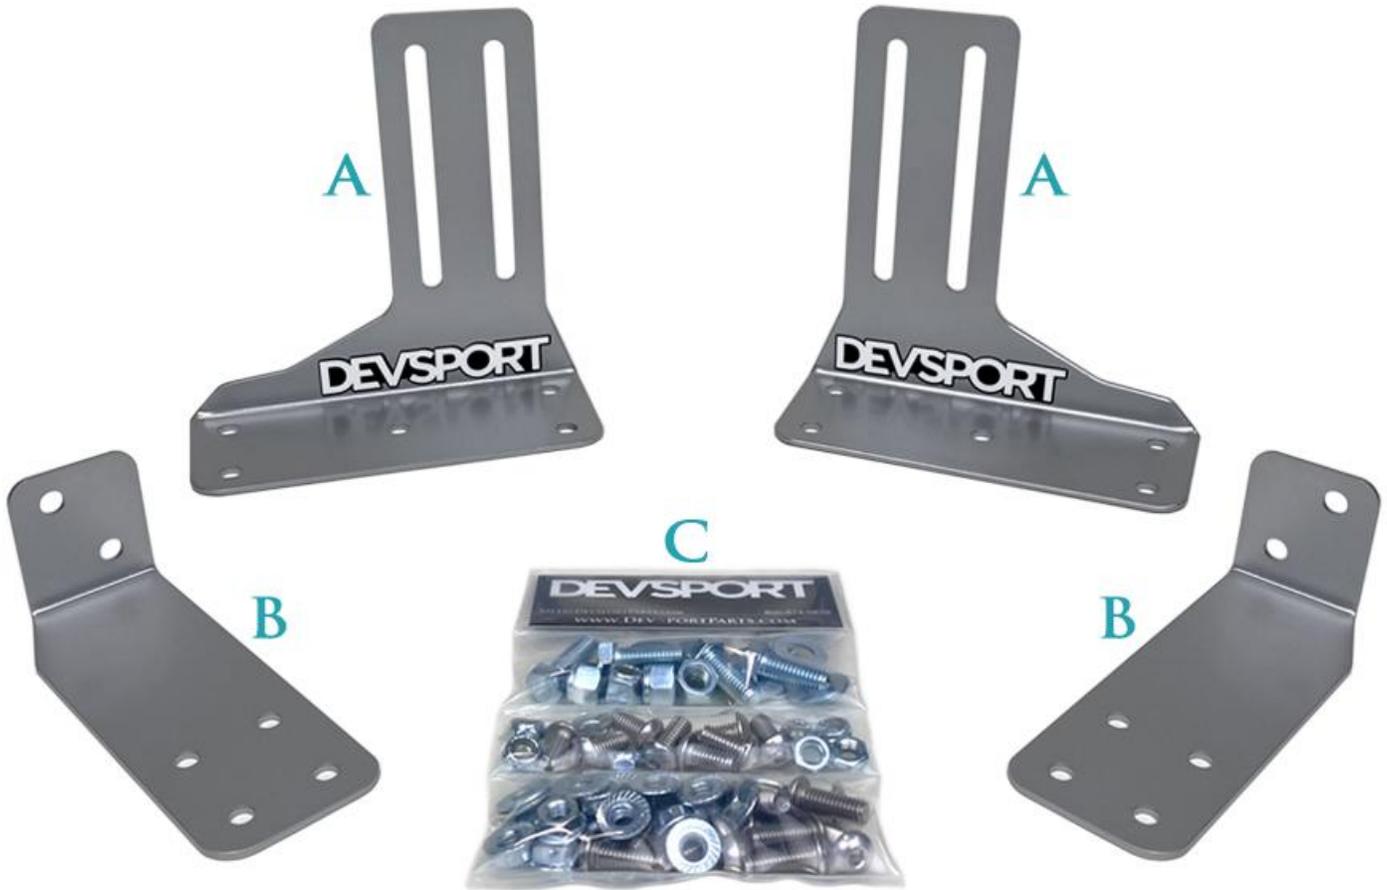

Part A: Lower Brackets

Part B: Upper Brackets


Part C: Hardware

STEP 1




This picture references the approximate placement of the Brackets on the crash beam. The Brackets are to fit between the fog light and center grill of the bumper. **Refer to Step 5.**

STEP 2

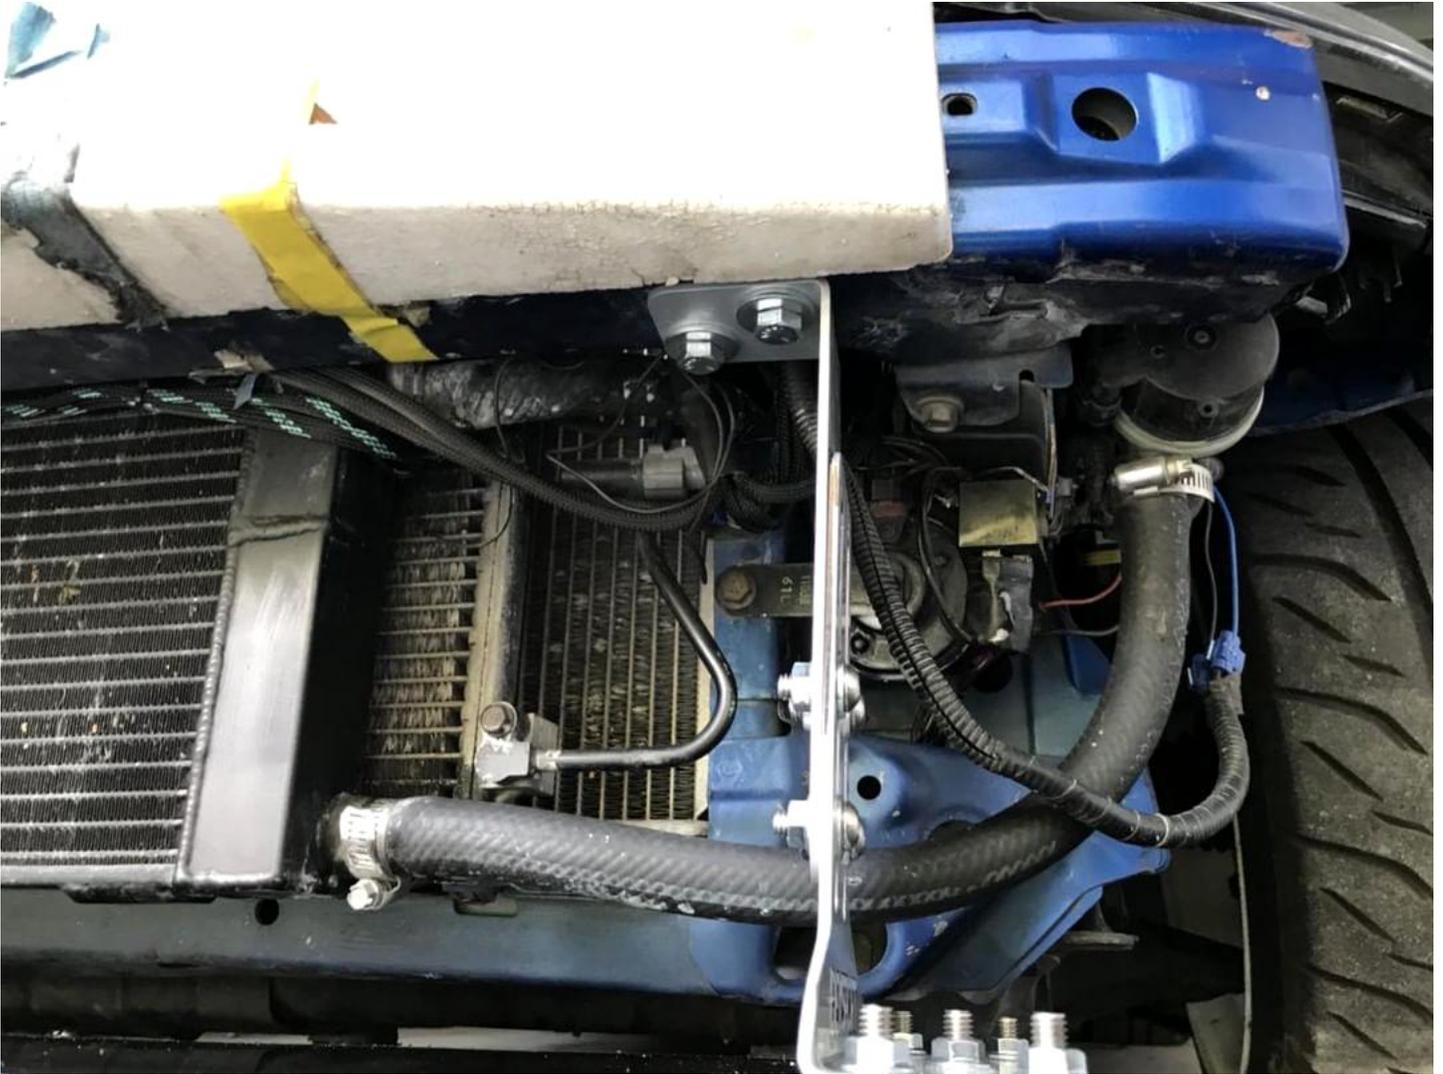

Place and mark the bolt holes of **Part B** (Upper Bracket) on the crash beam for each side.
The angled side of **Part B** faces towards the radiator support.
Using the 3/8" hardware mount the Upper Bracket to the crash beam.

STEP 3

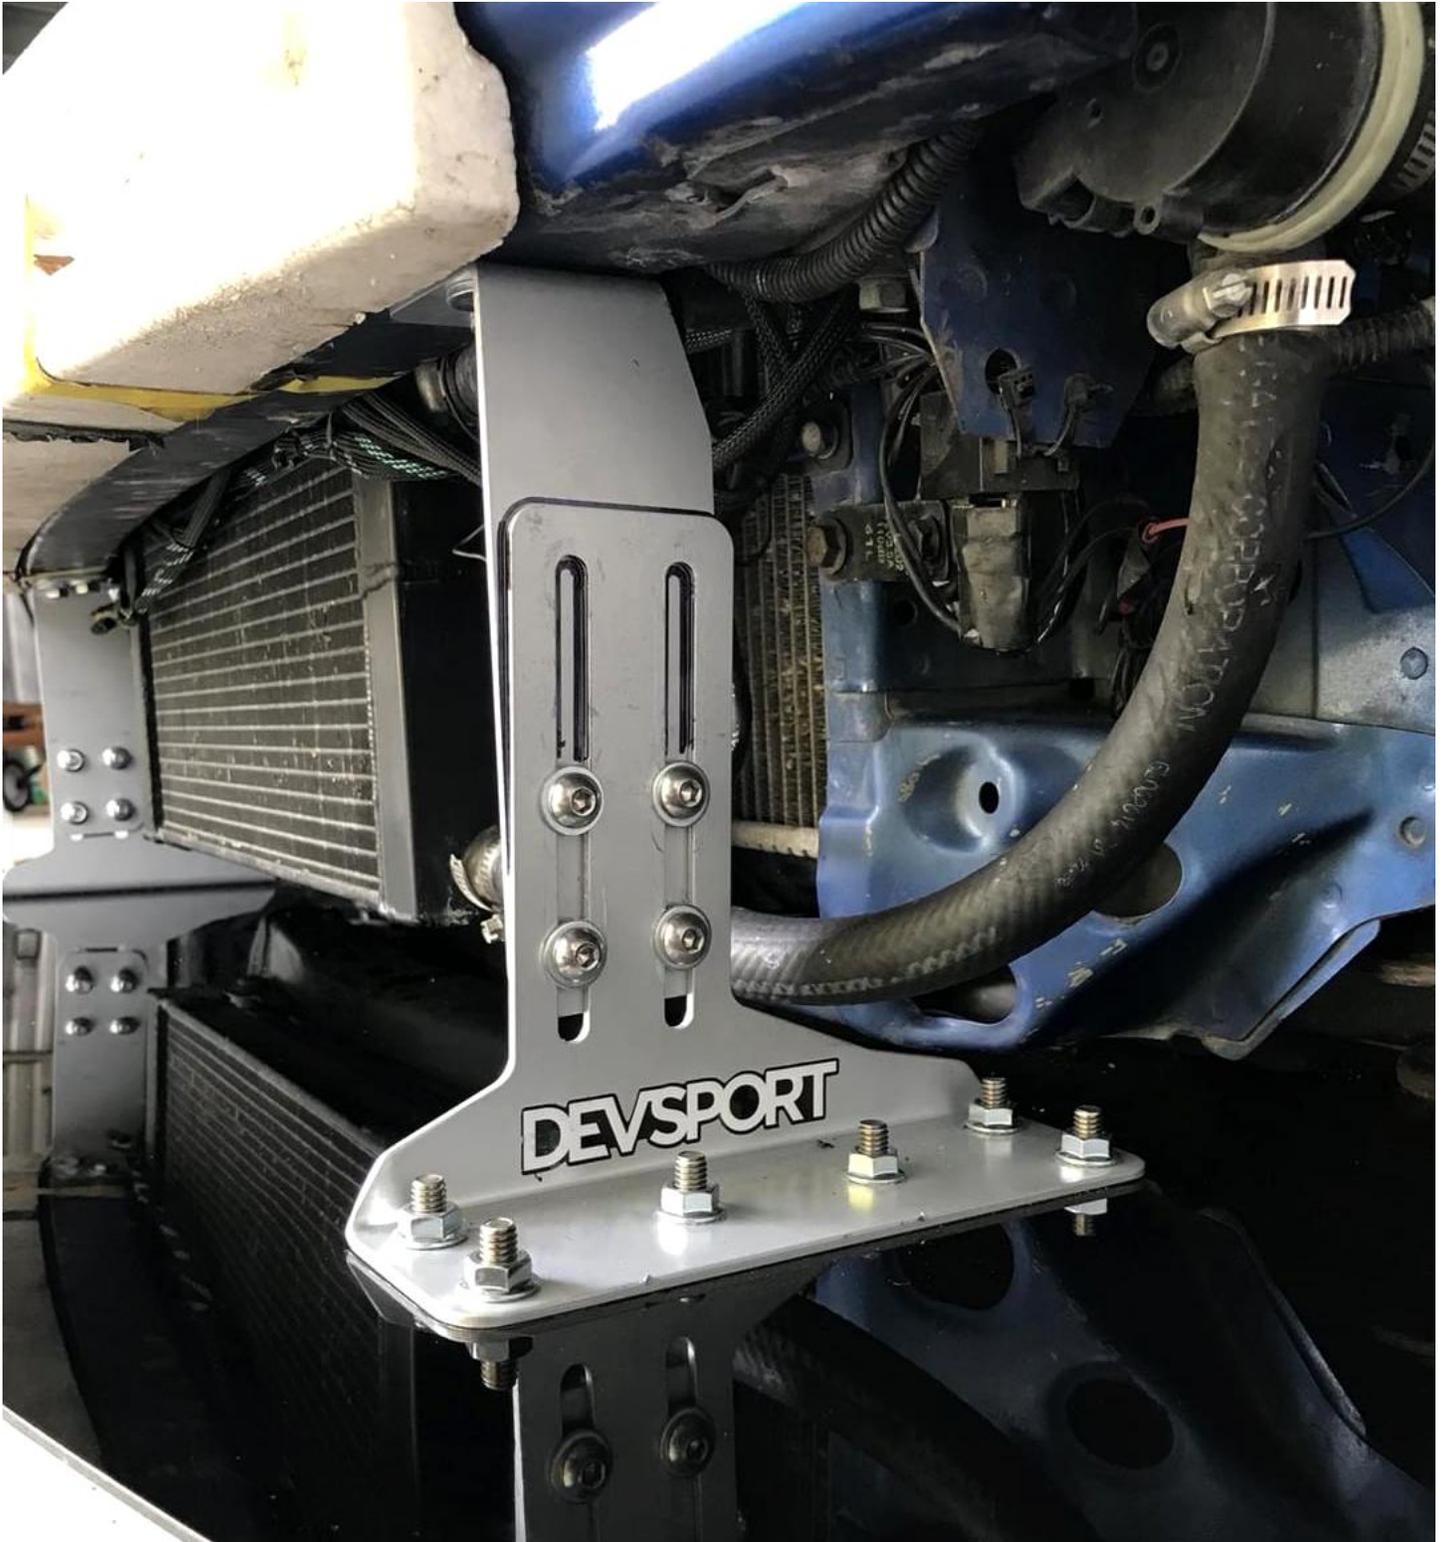

Bolt **Part A** (Lower Bracket) to **Part B** (Upper Bracket) using the 5/16" x 5/8" bolts. Leave the bolts a bit loose to adjust the height of the Brackets when installing the Front Splitter.

STEP 4



Once both brackets are installed, Lineup the Splitter and mark the holes for the Brackets. Drill the holes in the Splitter and mount the Splitter to the Brackets using the 5/16" x 7/8" bolts.

STEP 5



For the bumper to fit properly with the Chassis Brackets, you will need to cut a slit into the bumper's slash guard. This will allow the bumper to pass through the brackets.

Location is indicated as a general spot. Once the Brackets are mounted to the crash beam, line up the bumper to indicate the actual location where the slit will need to be cut.

STEP 6

With the bumper in place adjust the height of the Brackets to lineup the Splitter with the bottom of the bumper/lip. Removing the bumper might be necessary to tighten all the bolts.