


DEVSPORT

www.DEVSPORTPARTS.COM

ROCKER SIDE SPLITTER INSTALLATION

Install shall be made entirely at your own risk. DevSport is **not** responsible for any and all damages caused by the improper installation of any product. Professional installation is **recommended**.

Note: This is a general outline for installation. Actual application will vary slightly.

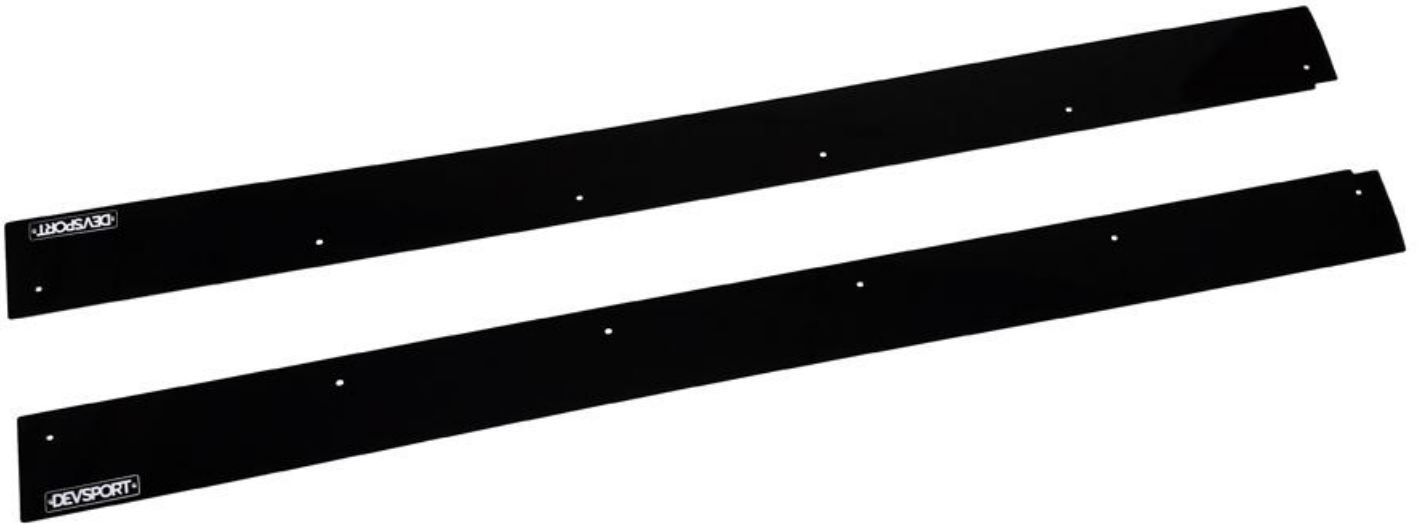

Hardware Includes
Sheet Metal Screws
Washers

Tools Required
Phillips Screw Driver
3/16" Drill Bit
Power Drill

STEP 1



Jack the car up and secure it with jack stands.

STEP 2



Align the Side Splitter to the rocker panel. Using the jack stands to hold the Splitter against the car. Use additional support if necessary to hold the Splitter against the rocker panel.

When aligning the Side Splitter, the DevSport badge indicates the rear of the Splitter.

STEP 3



Measure the extension of the Splitter from the rocker. Splitters are designed to have an extension of 1.75-2".

STEP 4



Splitters have pre-drilled mounting holes. Starting from the front of the Splitter, drill the pilot hole using 3/16" drill bit. Then secure with the sheet metal screw and washer. Continue this process working your way from front to back of the Splitter.

NOTE: Keep the screw snug, but do not over tighten the screws.

STEP 5



Adjust the tightness of each screw to straighten and level the Splitter.