


DEVSPORT

www.DEVSPORTPARTS.COM

S2000 SPLITTER CHASSIS BRACKETS INSTALLATION

Install shall be made entirely at your own risk. DevSport is **not** responsible for any and all damages caused by the improper installation of any product. Professional installation is **recommended**.

NOTE: Removing the bumper splash guard plastic is necessary for proper alignment of the Splitter. Also you will need to slightly trim the fender liner around the brackets on each side.

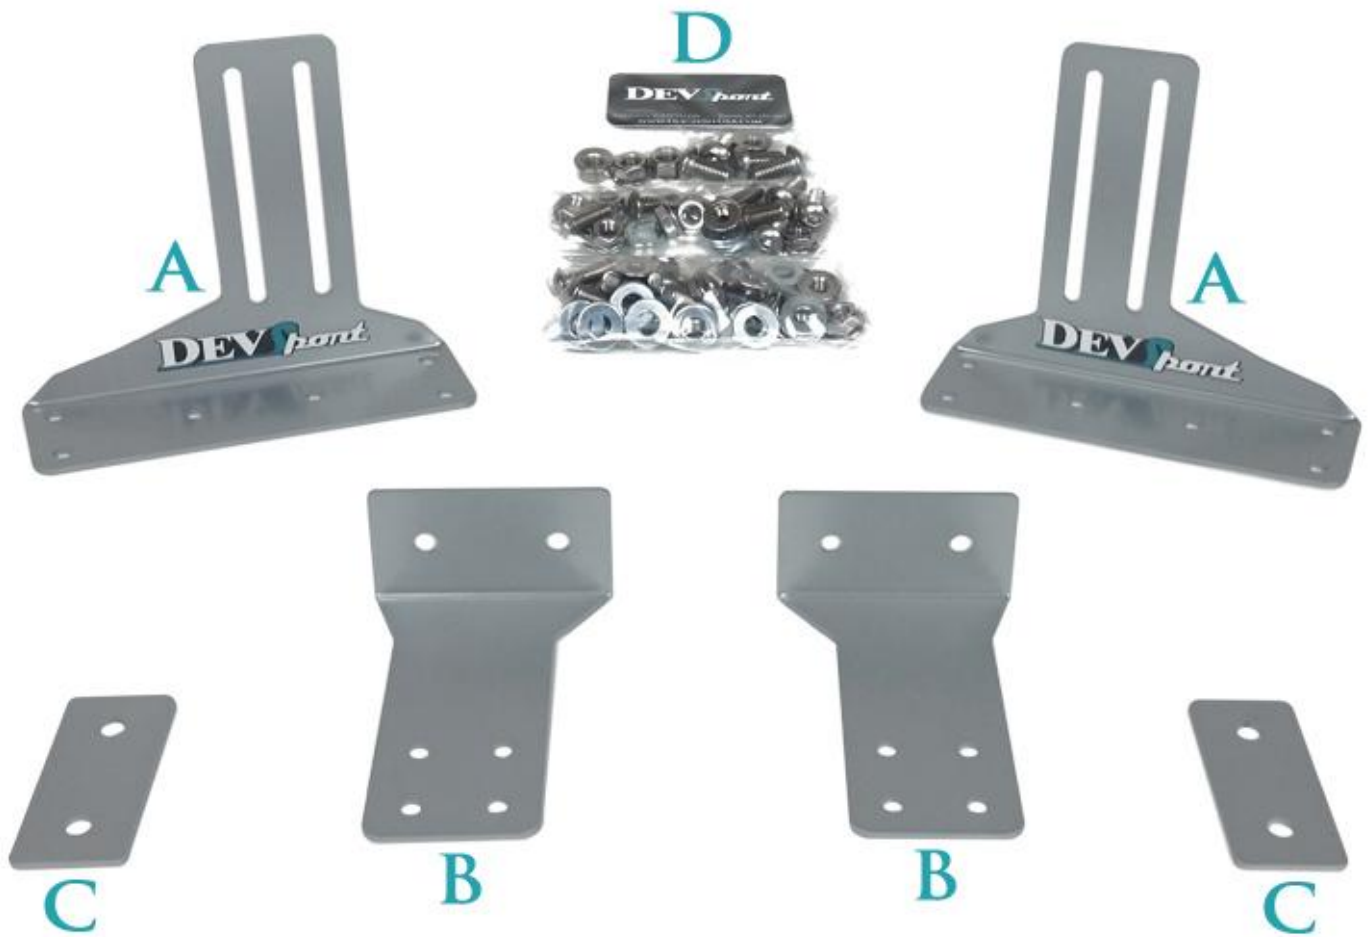

Part A: Main Brackets

Part B: Upper Brackets

Part C: Frame Bolt Plates

Part D: Hardware

STEP 1



Place **Part C** (Frame Bolt Plate) into the frame lining up the holes of the plate with the holes in the frame.

STEP 2



Using the 3/8" bolt and nuts attach **Part B** (Upper Bracket) to the frame and **Part C** (Frame Bolt Plate).

STEP 3



Bolt **Part A** (Main Brackets) to **Part B** (Upper Brackets) using the 5/16" x 5/8" bolts. Leave the bolts a bit loose to adjust the height of the Brackets when installing the Front Splitter.

This will be a good time to trim the fender liner around the brackets. This step isn't shown, but you will see where you will need to trim them once the brackets are installed as shown.

STEP 4



Lineup the Splitter to your preference and mark the holes for the Brackets.
Drill the holes in the Splitter and mount the Splitter to the Brackets using the 5/16" x 7/8" bolts.

STEP 5



With the bumper in place adjust the height of the Brackets to lineup the Splitter with the bottom of the bumper/lip. Removing the bumper might be necessary to tighten all the bolts.