


DEVSPORT

www.DEVSPORTPARTS.COM

SIDE SKIRT SPLITTERS INSTALLATION

Install shall be made entirely at your own risk. DevSport is **not** responsible for any and all damages caused by the improper installation of any product. Professional installation is **recommended**.

Note: This is a general outline for installation. Actual application will vary slightly.

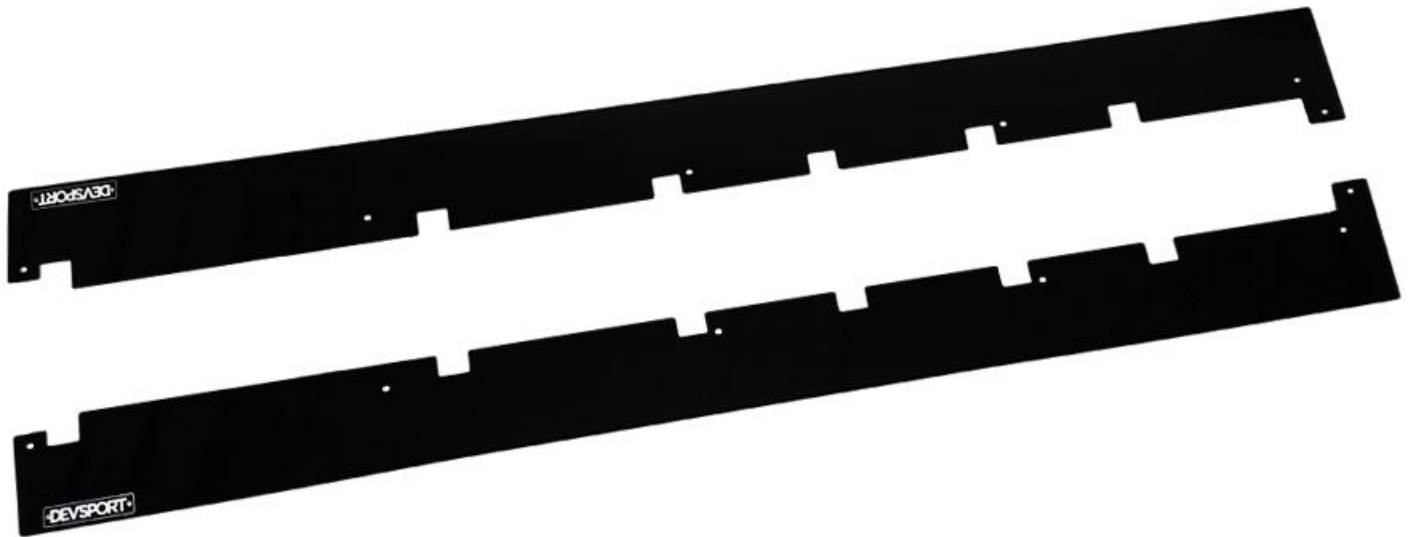

Hardware Includes

Socket Bolts
Washers
Lock Nuts

Tools Required


5/32" Allen Wrench
7/16" Wrench or Socket
5/16" Drill Bit
Power Drill

STEP 1



Remove the side skirts. Align the Splitter to the skirt making sure the oem mounting points are exposed to be able install the skirts normally.

STEP 2

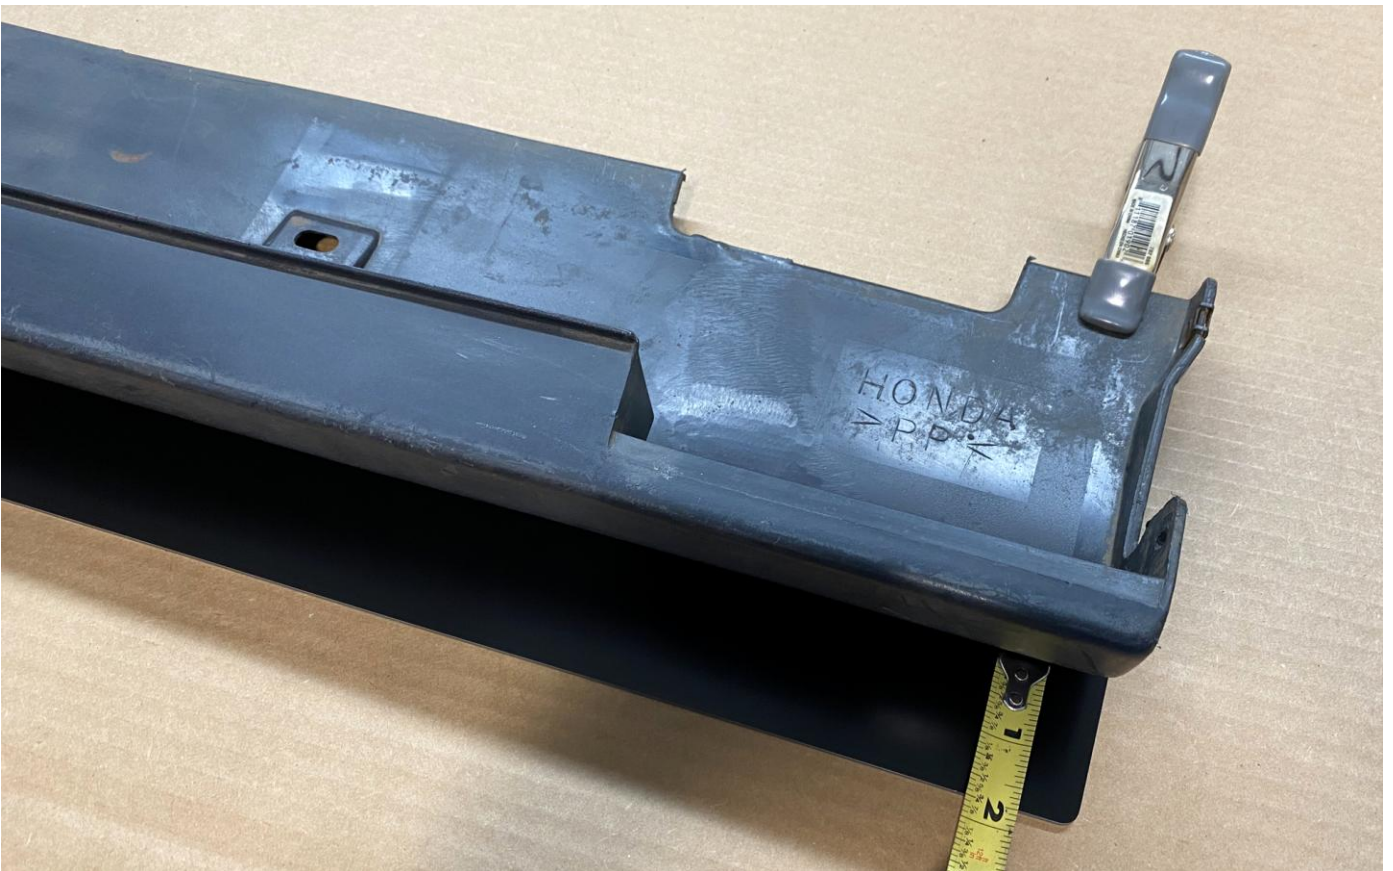

Measure the extension front and back. Side Splitters are designed to have 1.75"-2" extension. Once aligned clamp the Splitters to the skirts.

STEP 2



Using a 5/16" drill bit, drill mounting holes into the skirts. Insert the bolts up through the Splitter. Pair the small washers to the bolts and large washers with the nuts. Once nuts are tightened, install the side skirt to vehicle.

NOTE: Adjust the tightness of each nut to straighten and level the Splitter.