

DEVSPORT

www.DEVSPORTPARTS.COM

Installation Guide For B/D-Series Fuel Line - OEM Replacement Kit

This product may not be legal for highway use. DevSport is not responsible for any direct or indirect, actual or incidental expense attributed to the use of any parts sold by DevSport.

Purchasers agree to all of the terms of this agreement upon the purchase of parts.

Note: This is a general outline for installation. Actual application may vary slightly.

Whats Included



Part A: Feed Line

Part B: OEM Filter Fitting

Installation



Step 1:

Remove the OEM rubber fuel line from filter and fuel rail.



Step 2:

Thread "**Part B**" Filter Fitting to the OEM Filter. Make sure to use the Crush Washer for a tight seal.

Installation



Step 3:

Attach **“Part A”** Nylon Braided Line to **“Part B”** Filter Fitting.




Step 4:

Route **“Part A”** Nylon Braided Line under the intake tubing and up to the fuel rail.

Connect **“Part A”** Nylon Braided Fuel Line to your Aftermarket Fuel Rail using a -6an Inlet fitting.

INSTALLATION IS COMPLETE.


Using OEM Fuel Rail (Optional Fitting Required)

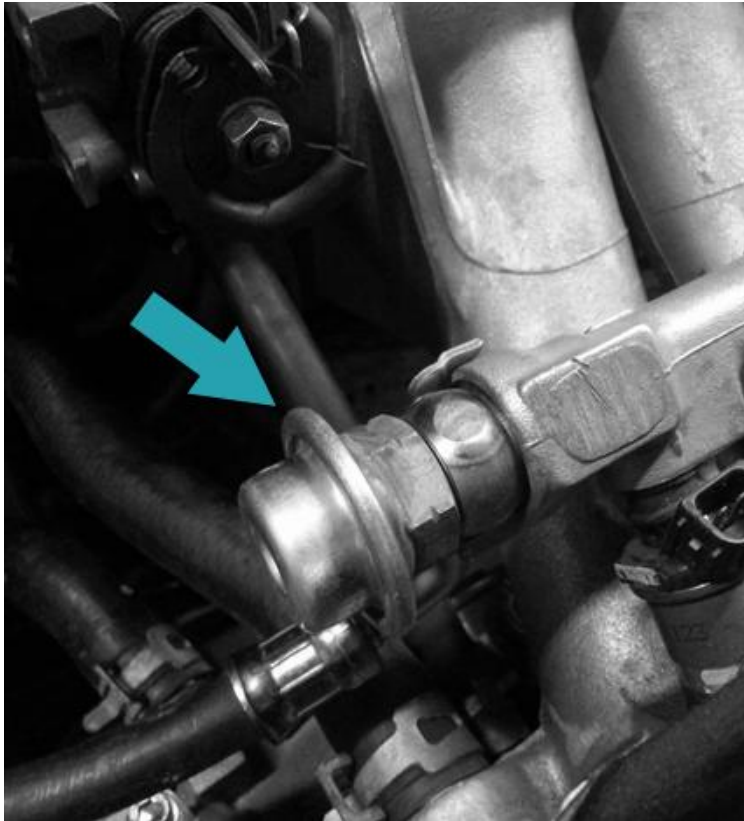

Step 1:

Remove the end Cap.

Remove the OEM Fuel Line.

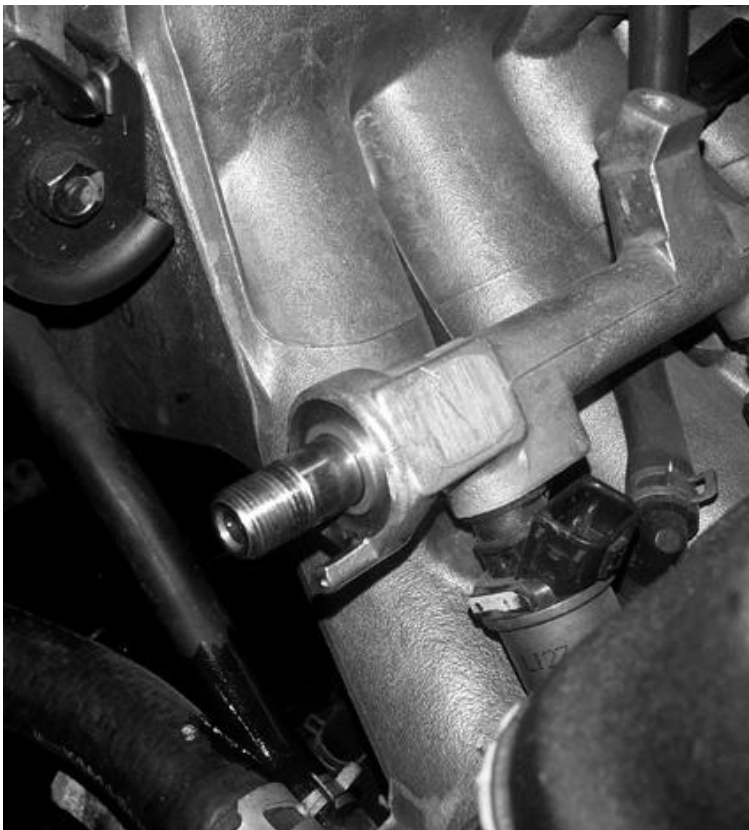

Step 2:

Remove the OEM fitting by using vise grips or double nut the end to unthread.

Thread "Optional" AN Fitting into the Fuel Rail and Connect "**Part A**" Nylon Braided Line.